SIDE STAND HS-137 for LEAD50 / 90	
CODE	656-1010137
APPLICATION	LEAD50 (AF20) LEAD90 (HF05)

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

ATTENTION (MUST READ)

- ▲ Pay attention to below to install side stand. Assembling mistake and improper setting may cause of trouble and accident.
- •We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- •This product is designed and made exclusive for application models, do not use other models.
- •The vehicle height is changed because of changing rear shock, etc may cause of falling because of stand degree. Please install with stock condition.
- After installation, move side stand back and forth, check the strage position and positon to stable vehicle.
- Do not shake or jump on the vehicle with using side stand. It might cause of breaking side stand, surrouding parts and accident.
- •Do not over weight. It causes of falling.
- Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- Please give this instruction sheet when you sell to someone.

 


 
This instruction sheet is for who has basic maintenance knowledge Do not operate if you do not have any skills and knowledg



Do not modify the way which is not listed or it will cause damage and trouble.







Do not start engine with using side stand. It might cause of jump out the vehicle and falling. Please storage side stand before riding.





Do not use side stand on soft mud, bumpy road, etc. Check the side stand on the flat hard road to not falling before using side stand.

120327



3-8-13 NAGATA, HIGASHI-OSAKA. KITACO OSAKA, JAPAN 株式会社 = 7 https://www.kitaco.co.jp/

HOW TO INSTALL

QTY

1

1

 $M3/8 \times 45$ mm

 $M8 \times 30$ mm

3/8mm

3/8mm

PACKING LIST

NAME

STAND MAIN UNIT

SPRING WASHER

BAND BRACKET

CUT OUT SEAL

INSTRUCTION SHEET

INSTALLATION ILLUSTRATION

FLAT WASHER

BOLT

BOLT

NUT

STEPPED SPACER

- 1) Remove left and right bolt of under cover, then lower it.
- 2) Attach cut out seal to under cover upper right as illustration1, then cut out along the dotted line by hacksaw.
- 3) Insert stepped spacer, bolt (3 / 8 x 45) to (B) hole from back side, tighten from front side with flat washer, spring washer and nut.
- 4) Insert side stand to a gap between frame and under cowl as illustration 4. Insert (B) bolt to (C) hole and tighten lightly with spring washer and nut. Install band bracket to (DE) hole with bolt (8x30) and tighten lightly with + driver, then tighen (CDE) alternately
- *ATTENTION: Tighen bolt one by one may cause of installation failure.
- 5) Put the under cover back. At this time, if the side stand interrupts to cover, please shave the interrupting point.

