

## SIDE STAND HS-160 for Dio (4st)

 
CODE	656-1010160
APPLICATION	Dio (4st) (AF62 / 68) / GIORNO (AF70)

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

### ATTENTION (MUST READ)

▲Pay attention to below to install side stand. Assembling mistake and improper setting may cause of trouble and accident.


- We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- This product is designed and made exclusive for application models, do not use other models.
- The vehicle height is changed because of changing rear shock, etc may cause of falling because of stand degree. Please install with stock condition.
- After installation, move side stand back and forth, check the storage position and position to stable vehicle.
- Do not shake or jump on the vehicle with using side stand. It might cause of breaking side stand, surrounding parts and accident.
- Do not over weight. It causes of falling.
- Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- Please give this instruction sheet when you sell to someone.




This instruction sheet is for who has basic maintenance knowledge. Do not operate if you do not have any skills and knowledge.



Do not modify the way which is not listed or it will cause damage and trouble.

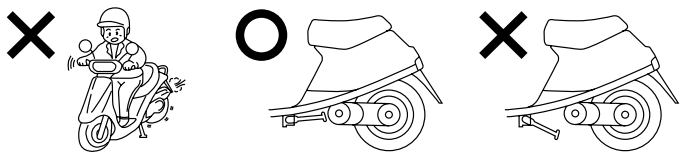

Do not start engine with using side stand. It might cause of jump out the vehicle and falling. Please storage side stand before riding.

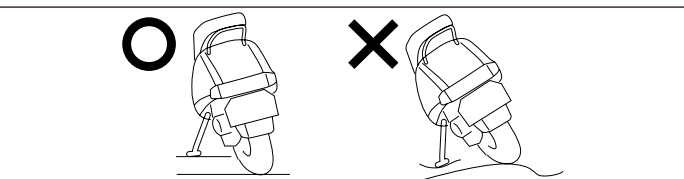

Do not use side stand on soft mud, bumpy road, etc. Check the side stand on the flat hard road to not falling before using side stand.

#### PACKING LIST

	NAME	QTY
1	STAND MAIN UNIT	1
2	STEPPED BOLT 6mm	1
3	SPRING WASHER 7mm	1
4	FLANGE NUT 6mm	1
5	INSTRUCTION SHEET	1

210913



3-8-13 NAGATA,  
HIGASHI-OSAKA,  
OSAKA, JAPAN  
<https://www.kitaco.co.jp/>

### HOW TO INSTALL


- 1) Loosen vehicle center bolt (A) U nut for 5~6mm by a ring wrench, press U nut lightly out to the other side, so that head (left side center bolt) comes out. (Do not remove U nut.)
- 2) Install side stand main unit from (E) to a gap between (B) head center bolt (5~6mm), tighten stepped bolt (6mm), spring washer (7mm) and flange nut to (C) (D) from back side of (D) hole while matching (C) (D) hole. Push up the side stand to upper left, make sure not to loosen, press (B) center head by hammer to put it back.
- 3) Tighten (C) flange nut (6mm), center bolt (A) U nut firmly. (Please use both ring wrench and box wrench to tighten firmly.)
- 4) After installing side stand, up the side stand to make sure not to stand spring hook and tip does not touch to brake wire.

### INSTALLING ILLUSTRATION

REQUIRED TOOL  
SPANNER

ILLUSTRATION I

CENTER BOLT U NUT (A)

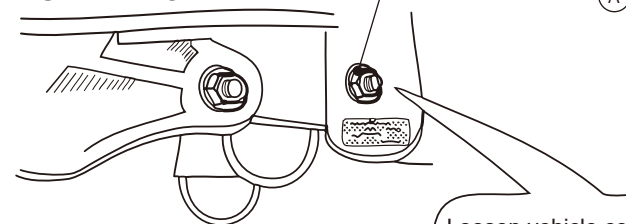


Loosen vehicle center bolt U nut.

5~6mm

ILLUSTRATION II

STEPPED BOLT 6mm  
FRAME

SPRING WASHER 7mm

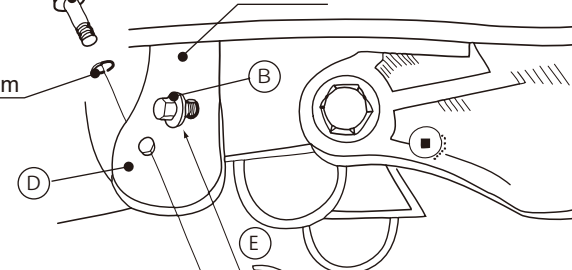

ATTENTION  
Apply oil if stand does not move well.

FLANGE NUT 6mm

