

GRAB BAR / SIDE GRIP				
CODE	GRAB BER	( SILVER ) 653-1300000	SIDE GRIP	( SILVER ) 539-1300000
		( BLACK ) 653-1300100		( BLACK ) 539-1300100
APPLICATION	MONKEY125 (JB02)			
GRAB BAR & SIDE GRIP NOT USABLE TOGETHER.				

• Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

### ATTENTIONS (MUST READ)

- This instruction sheet is for the instruction with stock condition.
- GRAB BAR / SIDE GRIP is designed and made exclusive for MONKEY125, do not use on other models. Do not modify the way which is not listed or it will cause damage and trouble.
- We are not responsible for damages and accidents caused by assembling mistake and improper setting.
- Please ask mechanic for assembling and setting.
- Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- Refer to the manufacturer HONDA service manual for each vehicle when installing
- Bolts and nuts may get loosen by engine vibration.
- Please check and make sure each part of bolts and nuts are not loose before running.
- Please contact a mechanic nearby immediately when you find something unusual.



Do not give strong pressure such as using rope and tie-down belt to carry motorcycle. Or it may break grab bar or surrounding parts.



Do not pick up motorcycle, using grab bar.

PACKING LIST					GRAB BER	SIDE GRIP	
FIG	PARTS NAME		CODE	PCS			REMARK
1	GRAB BER	SILVER (STAINLESS)	653-1300001	x1	-		
		BLACK (STEEL)	653-1300101		-		
2	SIDE GRIP	SILVER (STAINLESS)	539-1300001	-	x1		
		BLACK (STEEL)	539-1300101	-			
3	CAP BOLT WITH FLANGE	M8x25	080-0560025	x2	x2		Tightening torque : 26N·m (2.7kgf·m)
4	LOCK NUT WITH FLANGE	M8-P1.25	001-0550008	x2	x2		
5	WASHER	8x18xT1.6	090-0901008	x4	x4		
6	SPACER COLLAR	8.2x18xL5	093-9000014	x2	x2		

### HOW TO INSTALL

- 1) Remove seat .
  - 2) Tighten grab bar with bolt & collar on seat rail & rear shock mount place.  
※ When installing grab bar, removing rear shock mount is required.
  - 3) Tighten bolts which were already temporarily tightened.
- Make sure that each part is stable, each lamp works normally before running.

### HOW TO MAINTENANCE

Depending on how to use, stainless might rust.  
Dry the water out and apply rust-preventive agent, after getting wet such as motorcycle wash and after rain.

