KITACO SHOCK ABSORBER

APPLICATION : SUPER CUB50 (AA09) / SUPER CUB110 (JA10/44/59)

CODE (SPRING COLOR)

(BLUE) 520-1439010

(YELLOW) 520-1439030

(BLACK) 520-1439050

VEHICLE SIDEI

REMARK : •FREE LENGTH 341mm(SAME AS STOCK) •PRELOAD : NON STEP •BLACK BODY

•Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

ATTENTION (MUST READ)

- •Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- •We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- •After installation, steering stability has changed compared to the stock rear shock. Please ride safely.
- •Refer to the manufacturer service manual when installation.
- •Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- Do not modify the way which is not listed or it will cause damage and trouble.


*Metal/resin products get discolored/rust for ages as well as how to use. Please understand when using.

HOW TO INSTALL

- If there is a hard degradation like a blem, fatigue and wear etc on the reuse parts, please change to new ones.
- 1) Stable the vehicle body by using maintenance stand.
- Remove covers if necessary. Refer to the service manual when removing / installing.
- 3) Remove stock rear shock and install Kitaco one.
- %Tighten upper / lower mount bolt
- (nut) with specified torque. •UPPER / LOWER NUT :

29N•m(2.9kgf•m)

 Adjust each parts and make sure not to loosen any parts before riding.

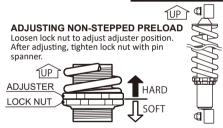

OPTION PARTS	CODE
PIN SPANNER 150mm (compatible with φ40~60)	674-0500801
HOOK WRENCH (compatible with φ 32~75)	674-0500850
ADJUSTABLE HOOK WRENCH (compatible with φ35~75)	674-0500880

220401



3-8-13 NAGATA, HIGASHI-OSAKA, OSAKA,JAPAN