


SIDE STAND YS-234 for VOX (XF50)

CODE	656-0010234
APPLICATION	VOX (3B31)
REMARK	Do not use side stand for delivery.

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

ATTENTION (MUST READ)


- ▲Pay attention to below to install side stand. Assembling mistake and improper setting may cause of trouble and accident.
- We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- This product is designed and made exclusive for application models, do not use other models.
- The vehicle height is changed because of changing rear shock, etc may cause of falling because of stand degree. Please install with stock condition.
- After installation, move side stand back and forth, check the strage position and positon to stable vehicle.
- Do not shake or jump on the vehicle with using side stand. It might cause of breaking side stand, surrounding parts and accident.
- Do not over weight. It causes of falling.
- Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- Please give this instruction sheet when you sell to someone.




This instruction sheet is for who has basic maintenance knowledge. Do not operate if you do not have any skills and knowledge.



Do not modify the way which is not listed or it will cause damage and trouble.

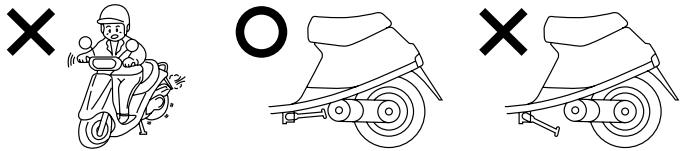

Do not start engine with using side stand. It might cause of jump out the vehicle and falling. Please storage side stand before riding.

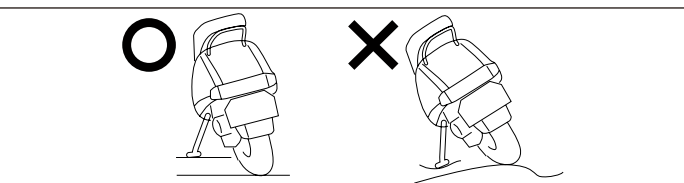

Do not use side stand on soft mud, bumpy road, etc. Check the side stand on the flat hard road to not falling before using side stand.

PACKING LIST

FIGURE	NAME	QTY
1	SIDE STAND MAIN UNIT	1
2	M8 x 25 BOLT (WITH SPRING WASHER)	2
3	8mm FLANGE NUT (SERRATED)	2
4	INSTRUCTION SHEET / REMARK	1

070724

INSTALLATION ILLUSTRATION

REQUIRED TOOL : SPANNER

HOW TO INSTALL

1) Insert bolt (8 x 25 with spring washer) to (A) hole back side referring to illustration 1, hold bolt head by hand and insert to side stand (C) hole, tighten 3 threads by hand. (temporarily install)

*There is a space on the back side of inner fender. (Illustration 2 ⇒ mark)

2) Insert hand from a gap between right side inner fender and frame, insert bolt (8 x 25) from back side of the (B) hole, hold bolt head and into side stand (D) hole, tighten 3 threads by hand and tighten (A) (C) , (B) (D) firmly alternately evenly with spanner.

*Installation bolt and flange nut tightening part is narrow, please hold bolt head and rotate flange nut little by little with spanner to tighten it. Please tighten (A) (C) , (B) (D) in the same way to tighten firmly.

*If inner fender touches side stand, please shave with cutter knife.

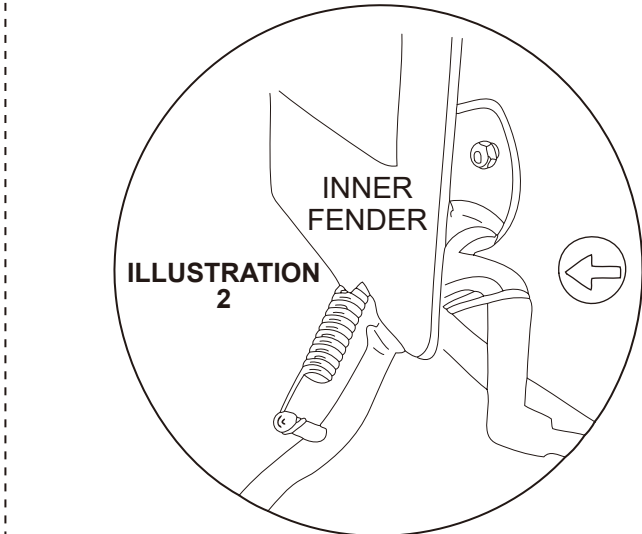
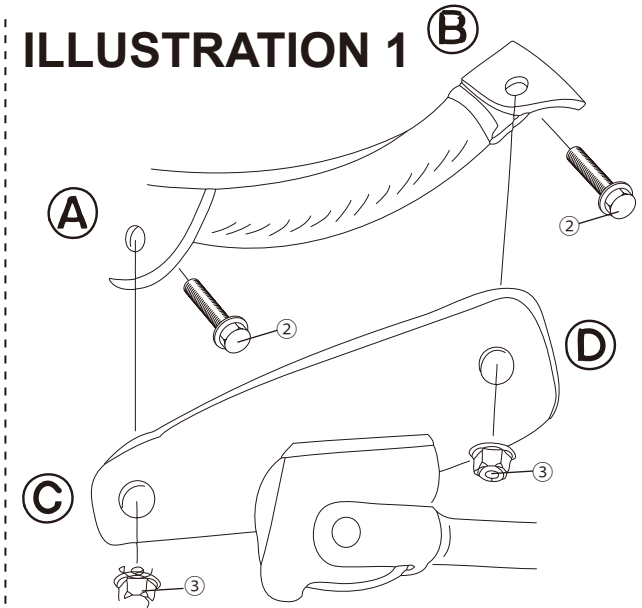


ILLUSTRATION 2