





# SIDE STAND YS-218 for JOG / -SPORTS / -Z

CODE	656-0010218
APPLICATION	JOG (3KJ) / SPORTS / -Z (3RY)

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.




## ATTENTION (MUST READ)

- ▲Pay attention to below to install side stand. Assembling mistake and improper setting may cause of trouble and accident.
- We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- This product is designed and made exclusive for application models, do not use other models.
- The vehicle height is changed because of changing rear shock, etc may cause of falling because of stand degree. Please install with stock condition.
- After installation, move side stand back and forth, check the strage position and positon to stable vehicle.
- Do not shake or jump on the vehicle with using side stand. It might cause of breaking side stand, surrouding parts and accident.
- Do not over weight. It causes of falling.
- Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- Please give this instruction sheet when you sell to someone.

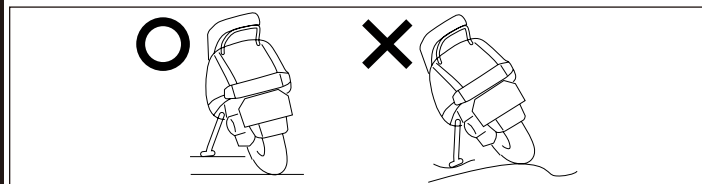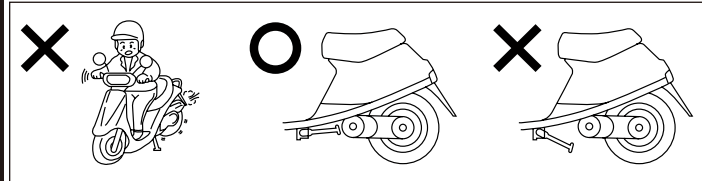

## HOW TO INSTALL

- 1) Firstly, remove under cowl left and right hole by the box (6mm) on back side and hang down referring to illustration I. (Remove wire cable that fitted in under cowl.)
  - 2) Attach cut-out sticker to under cowl upper side diagonal line part as illustration I, cut out along to the dotted line by hacksaw.
  - 3) Change the floor bolt (A) to Kitaco bolt (6 x 30mm), spring washer (6mm) and flat washer (6 x 1.6 x 18mm) as illustration II.
  - 4) Remove air cleaner case bolt (C), loosen bolt (D) and make air cleaner case move a little.
  - 5) Tighten frame (A) bolt (M6 x 30) to gold (9) nut (6mm) from under side firmly as illustration III. Then, fit the side stand from under side as illustration, put frame (A) bolt into stand (A) hole, tighten with (7) U nut (6mm) lightly, tighten frame (B) hole to stand (B) hole with spring washer (12mm), (2) bolt (12 x 30mm) from bottom, (3) Kitaco square nut with washer (12mm) from upper lightly, tighten (2) bolt and (7) U nut alternately evenly firmly.
- \*Do not mistake gold nut (6mm) for U nut (6mm). U nut (6mm) has return claw.
- 6) Put air cleaner case bolt back and tighten.
  - 7) Put the removed wire cable, under cowl and bolt back to finish installation.

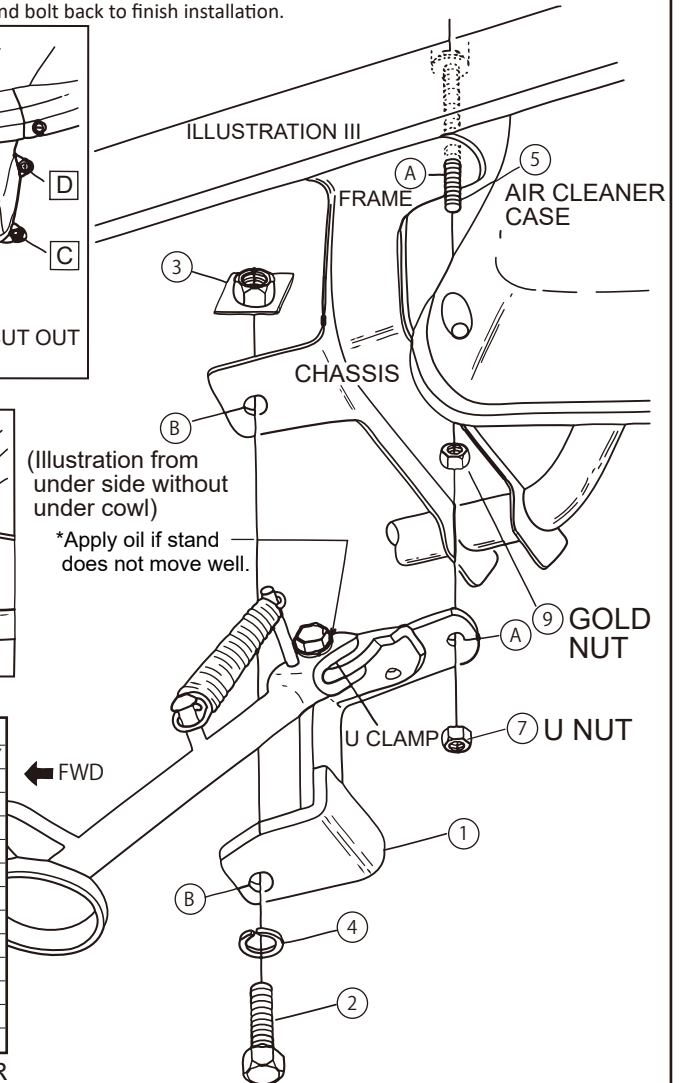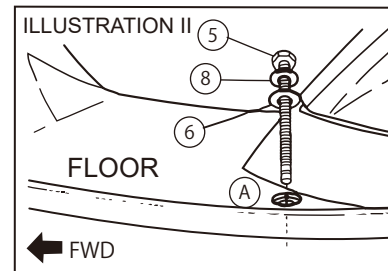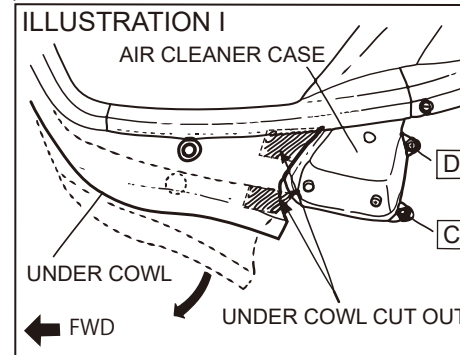

PACKING LIST		
No.	NAME	QTY
1	STAND MAIN UNIT	1
2	BOLT M12 x 30mm	1
3	KITACO SQUARE WASHER 12mm	1
4	SPRING WASHER 12mm	1
5	BOLT M6 x 30mm	1
6	FLAT WASHER 6 x 1.6 x 18mm	1
7	U NUT 6mm	2
8	SPRING WASHER 6mm	1
9	GOLD NUT 6mm	1
10	HACKSAW	1
11	CUT-OUT STICKER	1
12	INSTRUCTION SHEET / REMARK	1

REQUIRED TOOL : SPANNER

120406