SIDE STAND YS-224 for JOG-ZR / JOG-C / JOG-Z II


CODE 656-0010224

APPLICATION JOG-ZR (3YK7~9 / A / B) / JOG-C / JOG-Z II (5BM / 5EM)

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

ATTENTION (MUST READ)

- APay attention to below to install side stand. Assembling mistake and improper setting may cause of trouble and accident.
- •We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- •Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- •This product is designed and made exclusive for application models, do not use other models.
- •The vehicle height is changed because of changing rear shock, etc may cause of falling because of stand degree. Please install with stock condition.
- After installation, move side stand back and forth, check the strage position and positon to stable vehicle.
 Do not shake or jump on the vehicle with using side stand. It might cause of breaking side stand, surrouding parts and accident.
- •Do not over weight. It causes of falling.
- •Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving. •Please give this instruction sheet when you sell to someone.

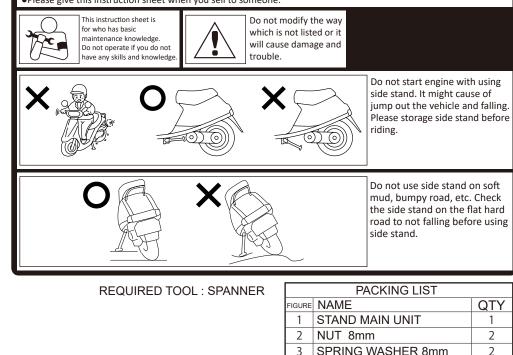

2Not Smith23SPRING WASHER 8mm24INSTRUCTION SHEET1

12022 3-8-13 NAGATA, HIGASHI-OSAKA, **KITACO** OSAKA,JAPAN

株式会社 丰子丁 https://www.kitaco.co.jp/

_ INSTALLATION ILLUSTRATION __ HOW TO INSTALL

- 1) Firstly, remove side cover L bolt (A) as illustration I.
- 2) Cut out the inner fender (B) part on illustration II by cutter knife. (Cut out part is from inside, illustration II dotted line, streaks appear due to embossing.)
- 3) Install side stand main unit to vehicle bracket from cut out part under side as illustration III.
- *At that time, pull inner fender to install, tighten with spring washer (8mm) and nut (8mm) from a gap between floor and inner fender.
- 4) Put inner fender and side cover L back on illustration II, tighten bolt (A) to finish installation.

