


# SIDE STAND YS-236 for AXIS TREET

CODE	656-0010236
APPLICATION	AXIS TREET (41D1 / 2)
REMARK	Do not use side stand for delivery.

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

## ATTENTION (MUST READ)


- ▲Pay attention to below to install side stand. Assembling mistake and improper setting may cause of trouble and accident.
- We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- This product is designed and made exclusive for application models, do not use other models.
- The vehicle height is changed because of changing rear shock, etc may cause of falling because of stand degree. Please install with stock condition.
- After installation, move side stand back and forth, check the strage position and positon to stable vehicle.
- Do not shake or jump on the vehicle with using side stand. It might cause of breaking side stand, surrounding parts and accident.
- Do not over weight. It causes of falling.
- Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- Please give this instruction sheet when you sell to someone.




This instruction sheet is for who has basic maintenance knowledge. Do not operate if you do not have any skills and knowledge.



Do not modify the way which is not listed or it will cause damage and trouble.

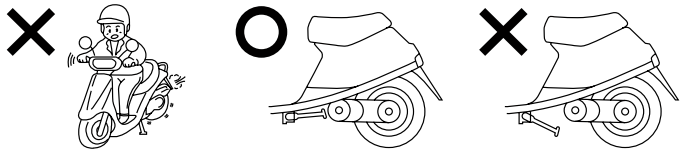

Do not start engine with using side stand. It might cause of jump out the vehicle and falling. Please storage side stand before riding.

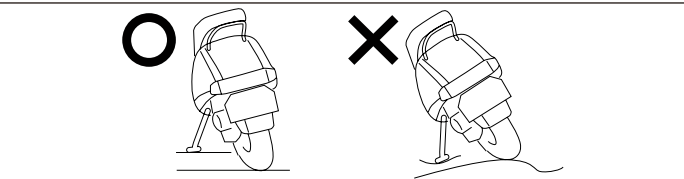

Do not use side stand on soft mud, bumpy road, etc. Check the side stand on the flat hard road to not falling before using side stand.

## PACKING LIST


FIGURE	NAME	QTY
1	SIDE STAND MAIN UNIT	1
2	M10 STEPPED BOLT	1
3	10mm U NUT	1
4	SPRING	1
5	INSTRUCTION SHEET	1

## INSTALLATION ILLUSTRATION

REQUIRED TOOL : SPANNER

HOW TO INSTALL

- 1) Insert side stand main unit U clamp as illustration I to the bracket as illustration II. Put Kitaco stepped bolt (M10) in and tighten with screw and attached U nut. (Over tightening may cause of moving difficulty.)
- 2) Hook spring to bracket spring hook on illustration I vehicle side and ① stand main unit spring hook.
- 3) Apply oil to pivot position (bracket and stand sliding surface) to make sure it moves well.

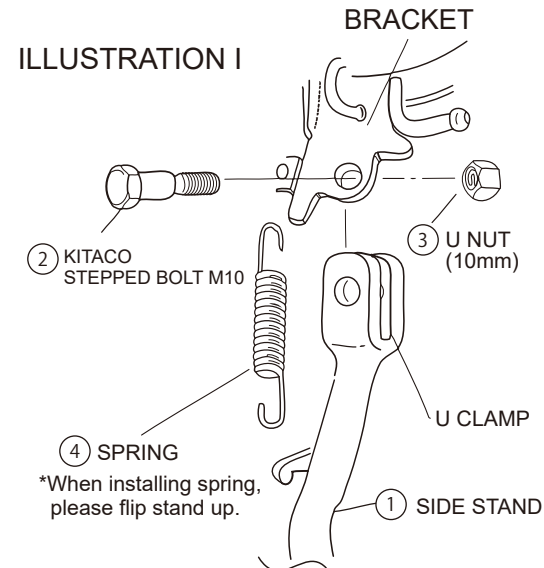

② KITACO STEPPED BOLT M10

BRACKET

③ U NUT (10mm)


④ SPRING

U CLAMP

① SIDE STAND

\*When installing spring, please flip stand up.

ILLUSTRATION II  
Finished illustration

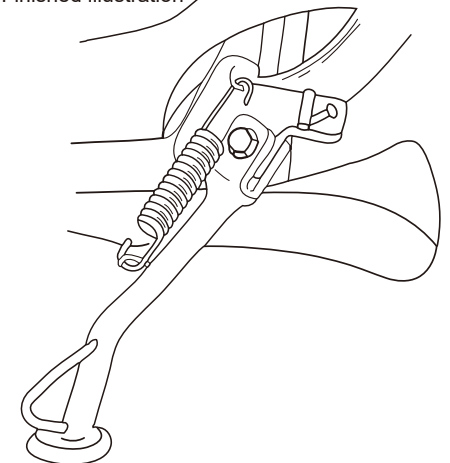

130501



3-8-13 NAGATA,  
HIGASHI-OSAKA,  
OSAKA, JAPAN  
<https://www.kitaco.co.jp/>