


SIDE STAND HS-129 for DIO / SPORTS / SR	
CODE	656-1010129
APPLICATION	DIO / SPORTS / SR (AF18)

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

ATTENTION (MUST READ)


- ▲Pay attention to below to install side stand. Assembling mistake and improper setting may cause of trouble and accident.
- We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- This product is designed and made exclusive for application models, do not use other models.
- The vehicle height is changed because of changing rear shock, etc may cause of falling because of stand degree. Please install with stock condition.
- After installation, move side stand back and forth, check the strage position and positon to stable vehicle.
- Do not shake or jump on the vehicle with using side stand. It might cause of breaking side stand, surrouding parts and accident.
- Do not over weight. It causes of falling.
- Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- Please give this instruction sheet when you sell to someone.

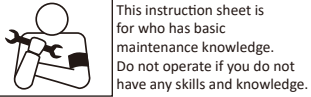


This instruction sheet is for who has basic maintenance knowledge. Do not operate if you do not have any skills and knowledge.



Do not modify the way which is not listed or it will cause damage and trouble.

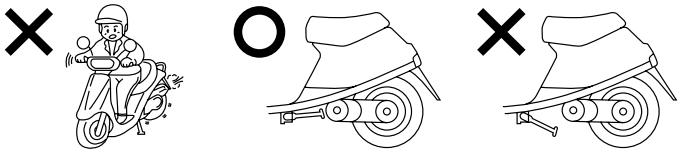

Do not start engine with using side stand. It might cause of jump out the vehicle and falling. Please storage side stand before riding.

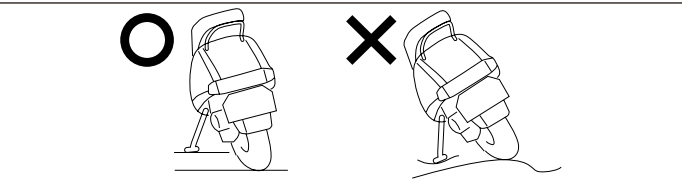


Do not use side stand on soft mud, bumpy road, etc. Check the side stand on the flat hard road to not falling before using side stand.

HOW TO INSTALL

- 1) Push up the rear brake cable bracket by finger as illustration II.
- 2) Put the stud bolt (M6 x 70) in the (A) hole from a gap above frame as illustration III.
- 3) Remove (B) stock bolt.
- 4) Insert stand from under side as illustration III to (C) hole with (A) bolt and tighten temporarily with spring washer / nut (6mm). Match (B / D) hole and tighten temporarily with attached spring washer 6mm and bolt (6 x 20mm), then tighten (A / C) (B / D) alternately evenly.
- 5) After installation, make sure not to interrupt stand and rear brake.

ADDITIONAL INSTRUCTION

Installing above is safe, but make additional 6.2mm hole on frame to match (E) hole and install attached 6 x 15 bolt / spring washer / nut (6mm) to make it stronger.

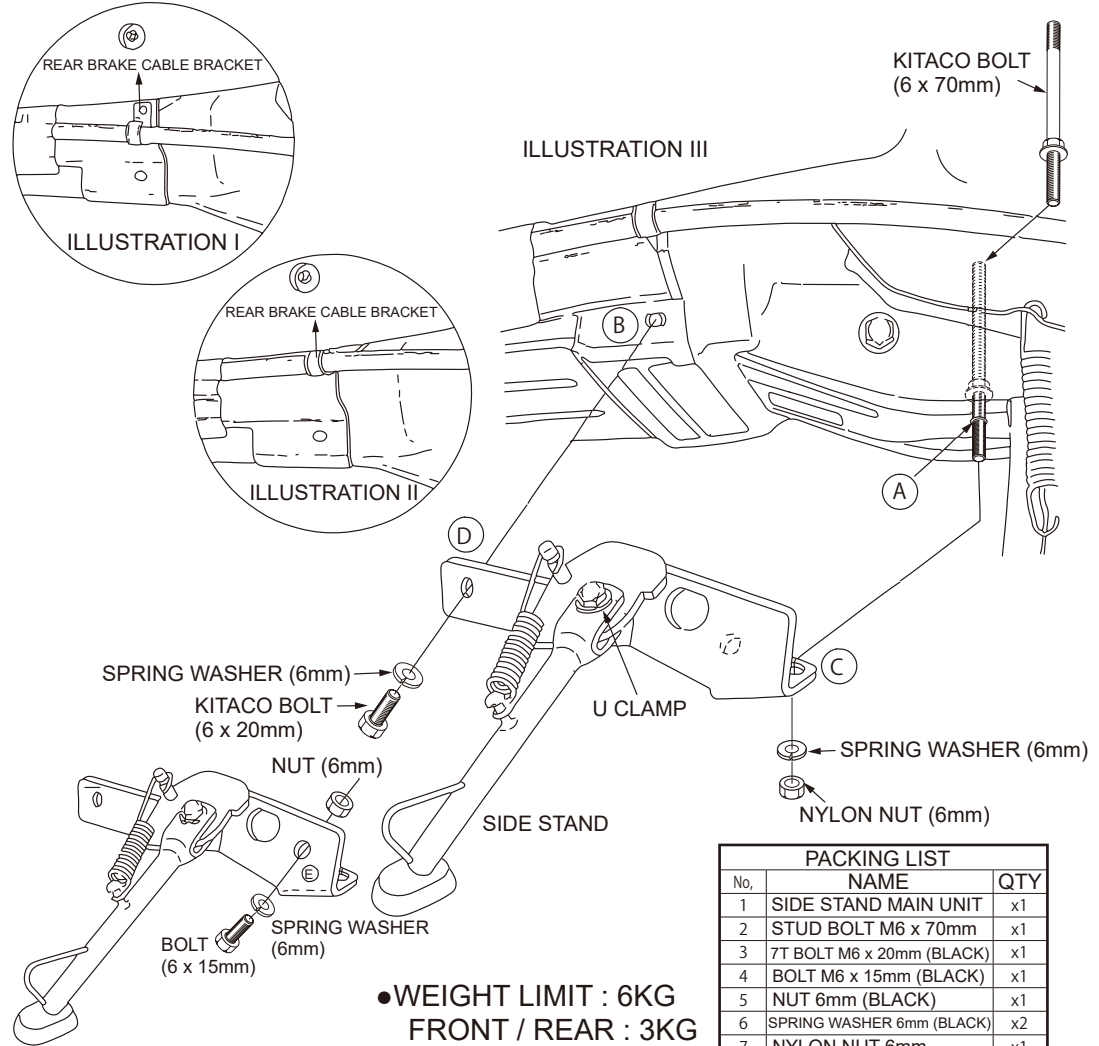

●WEIGHT LIMIT : 6KG
FRONT / REAR : 3KG

PACKING LIST		
No.	NAME	QTY
1	SIDE STAND MAIN UNIT	x1
2	STUD BOLT M6 x 70mm	x1
3	7T BOLT M6 x 20mm (BLACK)	x1
4	BOLT M6 x 15mm (BLACK)	x1
5	NUT 6mm (BLACK)	x1
6	SPRING WASHER 6mm (BLACK)	x2
7	NYLON NUT 6mm	x1
8	SPRING WASHER 6mm	x1
9	INSTRUCTION SHEET	x1

210915