

AERO VISOR	
CODE	SMOKE : 670-1457100
APPLICATION	SUPER CUB110 (JA59)

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.


ATTENTION (MUST READ)

- This product is designed and made exclusive for application models, do not use other models. Do not modify the way which is not listed or it will cause damage and trouble.
- We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- Refer to the manufacturer service manual when installation.
- Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- This instruction sheet is for the instruction for stock condition.

HOW TO HANDLE VISOR

⚠ ATTENTION

- Under direct sunlight, the deformation, fire, etc trouble might occur because of condensing phenomenon due to concave mirror effect. Be careful when parking.
- In case of parking under direct sunlight, please protect screen from direct sunlight by using soft cloth, etc.
- When windy day, it is easy to get effect by wind, please ride at reduced speed.
- In case of parking with body cover on, please choose shaded and well ventilated place. If parking under the high heat with body cover on, temperature increases inside and it might cause of deformation.
- Be careful not to apply battery fluid and brake fluid. It breaks screen.
- Do not apply excessive force and hard bend. It might cause of broken.
- Please check regularly to make sure not to loosen and slip. Please do additional tightening in need.
- Well nut get aging by ultraviolet rays and aging. If deterioration is remarkable, please change to new one.
- If there is a hard scratch and break on screen, please change to new one because it might fall off.
- In case that screen gets dirt, wipe with soft cloth or sponge with lots of water. Do not use blush because screen is easy to get scratch.
- In case of screen gets heavy dirt, please use neutral detergent. Do not use abrasive powder, organic solvent, acid / alkaline detergent, gasoline, benzine, sinner, etc.

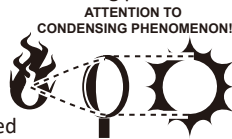

PACKING LIST			
FIGURE	NAME	CODE	QTY
1	VISOR (SCREEN) type-2 (SMOKE)	670-9000102	x1
2	STAY (JA59) L	670-1457101	x1
3	STAY (JA59) R	670-1457102	x1
4	PAN HEAD (+) SCREW (B) M5x20	052-0503020	x4
5	WASHER (B) 12x5.2xT1.5mm	090-0914005	x4
6	WELL NUT C550L M5x0.8	678-0500112	x4
7	SPACER COLLAR 16x10.3x3mm	0900-093-00017	x1

HOW TO INSTALL

※ADVICE

When installing, tighten each bolt temporarily. Then tighten firmly with adjusting left and right balance.

- 1) Remove stock mirror.
- 2) Install mirror adaptor and stay L/R to mirror installation position temporarily with checking their shape. (Refer to the illustration below.)
- 3) Install visor (screen) temporarily with attached well nut / bolt / washer while adjusting left and right balance.
- 4) After adjusting balance, tighten each bolts firmly. (Tighten well nut bolts with specified torque below.)

ATTENTION!

- Basically, reuse stock parts if it is unattached.
- If there is a hard degradation like a blem, fatigue and wear etc on the reuse parts, please change to new ones.

SUPER CUB (JA59) INSTALLATION ILLUSTRATION

