

KITACO SHOCK ABSORBER

APPLICATION:DAX 125 (JB04)

CODE (SPRING COLOR)

(RED) 520-1320020 | (YELLOW) 520-1320030 | (BLACK) 520-1320050

REMARK : ● FREE LENGTH 343mm (SAME AS GENUINE) ● PRELOAD : NON-STEP ● BLACK BODY

● Thank you for purchasing KITACO product. Read and understand the instruction before installing.

ATTENTIONS (MUST READ)

- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the surrounding parts.
- We are not responsible for damages and accidents caused by assembling mistake and improper setting.
- After the installation, the steering stability has changed compare to the normal rear shock, please drive safely.
- When installing, please refer to the manufacturer service manual.
- Bolts and nuts may get loosen by engine vibration.
- ※ Metal/resin products get discolored/rust for ages as well as how to use. Please understand when using.

HOW TO INSTALL

※If there is a hard degradation like scratch, setting, friction, etc on the reuse parts, please change to new ones.

ADJUSTING NON-STEP PREROAD

Adjust the preload position, by loosing lock nut. Fasten the lock nut by pin spanner after adjustment.


- 1) Secure the motorcycle body, by placing the maintenance stand.
- 2) Remove body plastics, if necessary. (Make sure to refer to manufacturer service manual when removing plastics.)
- 3) Remove genuine rear shock, install KITACO rear shock.

※ UPPER/LOWER mounting bolts with designated torque.

UPPER:29N·m(2.9kgf·m)

LOWER:34N·m(3.4kgf·m)

- 4) Adjust each part, making sure that the rear shock is stable before riding.

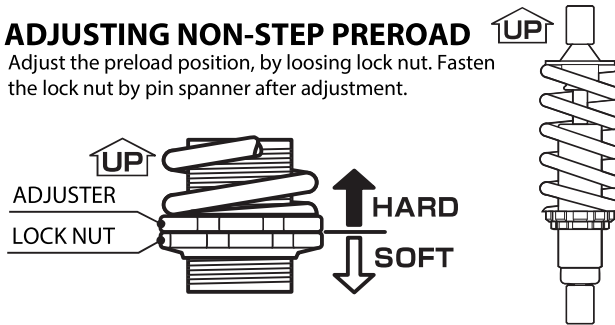

OPTIONAL PARTS	CODE
PIN SPANNER 150mm(Φ40~60)	674-0500811
ADJUSTABLE HOOK WRENCH(Φ35~75)	674-0500881

