HANDLE UPPER HOLDER type-3 (Handle O.D. φ22.2/M8 bolt) CODE RED: 561-9000320 BLACK: 561-9000350 SILVER: 561-9000360 GOLD: 561-9000370 APPLICATION (Installing confirmed)

MONKEY125 (JB02) \cdot GROM (JC61/JC75) \cdot CT125 HUNTER CUB (JA55) \cdot PCX125 (JF28 \sim 81JK05/06) \cdot PCX150 (KF12 \sim 30) \cdot PCX160 (KF47) \cdot FORZA -SI (MF12) \cdot GB350/S (NC59)

Thank you for purchasing Kitaco product.

Read and understand the instruction before installing.


ATTENTION (MUST READ)

- Do not modify the way which is not listed or it will cause damage and trouble.
- We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- Refer to the manufacturer service manual when installation.
- Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- **Metal/resin/alumite products get discolored/rust for ages as well as how to use. Please understand when using.


PACKING LIST	
NAME	QTY
HANDLE UPPER HOLDER type-3 (M8)	× 2

INSTALLING / REMOVING

- OLoosen back side cap bolt and front side bolt then remove them.
- OCheck our upper holder punch mark, then install with punch mark to front side.
- *The tightening bolt process is to tighten front side 2pcs, then tighten back side 2pcs.
- *Make sure not to loosen each screw or break regularly.

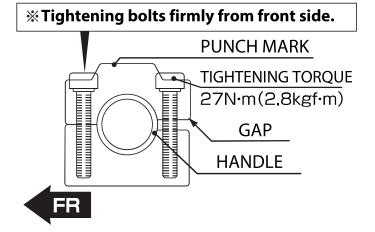

*Measurement is approximate.

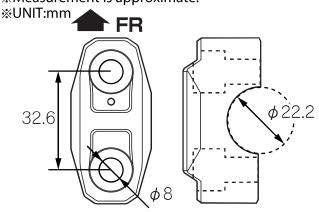

220824



〒 577-0015 3-8-13 NAGATA,HIGASHI-OSAKA,OSAKA,JAPAN