SIDE STAND HS-166 for DUNK		
CODE	656-1010166	
APPLICATION	GIORNO [4ST] (AF77) / TACT / -BASIC [4ST] (AF75 / 79) / DUNK (AF74 / 78)	
REMARK	Do not use side stand for delivery.	

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

ATTENTION (MUST READ)

- ▲ Pay attention to below to install side stand. Assembling mistake and improper setting may cause of trouble and
- •We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- •This product is designed and made exclusive for application models, do not use other models.
- •The vehicle height is changed because of changing rear shock, etc may cause of falling because of stand degree. Please install with stock condition.
- After installation, move side stand back and forth, check the storage position and positon to stable vehicle.
- Do not shake or jump on the vehicle with using side stand. It might cause of breaking side stand, surrouding parts and accident.
- Do not over weight. It causes of falling.
- •Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- Please give this instruction sheet when you sell to someone.



This instruction sheet is for who has basic maintenance knowledge. Do not operate if you do not have any skills and



Do not modify the way which is not listed or it will cause damage and







Do not start engine with using side stand. It might cause of jump out the vehicle and falling. Please storage side stand before riding.





Do not use side stand on soft mud. bumpy road, etc. Check the side stand on the flat hard road to not falling before using side stand.

171212



INSTALLATION ILLUSTRATION

REQUIRED TOOL: 12mm SPANNER

HOW TO INSTALL

- 1) Attach sticker under the side cover and under cover, then cut along to dotted line. (Be careful not to damage cover.)
- 2) Insert bolt with stay to hole that (A) and (B) matched. then tighten with flange nut temporarily.
- 3) Insert bolt with stopper to hole (C) and (D), then tighten with flange nut together.
- 4) Tighten temporarily tightening bolts alternately evenly and firmly to finish installation.

PACKING LIST		
	NAME	QTY
1	SIDE STAND MAIN UNIT	1
2	BOLT WITH STAY	1
3	BOLT WITH STOPPER	1
4	FLANGE NUT M8	2
5	CUT OUT STICKER	1
6	HANDSAW	1
7	INSTRUCTION SHEET	1

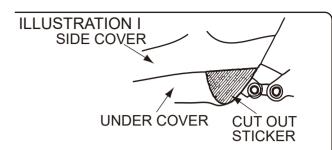


ILLUSTRATION II

