

AERO VISOR

CODE	SMOKE : 670-1300100	
APPLICATION	MONKEY 125 (JB02/03) /	DAX 125 (JB04)

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.


ATTENTION (MUST READ)

- This product is designed and made exclusive for application vehicles, do not use other models. Do not modify the way which is not listed or it will cause damage and trouble.
- We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.
- Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.
- Refer to the manufacturer service manual when installation.
- Bolts and nuts may get loosen by engine vibration. Make sure not to loosen any bolts and nuts before driving.
- This instruction sheet is for the instruction for standard condition.

HOW TO TAKE CARE THE SCREEN

⚠ATTENTION

- Under the direct sunlight, it might occur the trouble like deformation, fire, etc, because of condensing phenomenon due to concave mirror effect. Be careful when parking.
- When parking under direct sunlight, please block screen from direct sunlight by soft cloth, etc.
- When windy day, it is susceptible to wind, please drive at reduced speed.
- When parking with body cover on, choose a shaded and well-ventilated place. If you park under the high heat with body cover on, heat builds up inside, it may cause deformation.
- Be careful not to adhere battery fluid, brake fluid. It breaks screen plastic.
- Do not apply excessive force, hard bend, it may cause of broken.
- Please inspect sometimes not to loosen and backlash for additional tightening.
- Walnut is aging by ultraviolet rays and aging, if deterioration is remarkable, please change to new one.
- If there is a hard scratch and break, please change to new one because it might fall off.
- When screen get dirt, wipe with soft cloth or sponge with lots of water. Screen is easy to get hurt, do not use blush.
- If screen gets heavy dirt, please use neutral detergent. (Using abrasive powder, etc is prohibited.) Do not use organic solvent like acid/alkaline detergent, gasoline, benzine, sinner, etc.

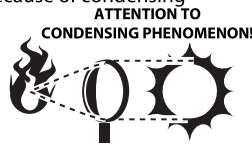

PACKING LIST (Refer to the illustration on the right side.)

FIGURE	NAME	CODE	QTY
1	SCREEN SMOKE	670-1300101	× 1
2	SCREEN HOLDER	670-1850104	× 2
3	SCREEN STAY L	670-1300102	× 1
4	SCREEN STAY R	670-1300103	× 1
5	SPACER WASHER 6 × 18 × L2.3	090-0060180	× 2
6	PAN HEAD(+) SCREW(B) M5 × 20	052-0503020	× 4
7	WASHER(B) 12 × 5.2 × T1.5mm	090-0914005	× 4
8	RUBBER COLLAR 13 × 6.2 × T1mm	0900-094-09801	× 4
9	WELNUT C550L M5 × 0.8	678-0500100	× 4
10	BUTTON CAP BOLT M6 × 15	060-0602015	× 4
11	FLANGE LOCK NUT 6mm	001-0550006	× 4
12	FLANGE HEXAGON BOLT M6 × 15	062-0563015	× 4

HOW TO INSTALL

※ADVICE

- When installing, tighten each bolts temporarily, then tighten finally with adjusting left and right balance.
- 1) Remove head light bracket mounting bolt and head light mounting bolt.
 - 2) Install stay temporarily with attached ⑫M6x15 bolt, genuine head light bolt and attached spacer washer following illustration below. ※Make sure the shape of screen stay L/R (be careful of press direction) before installation.
 - 3) Screen holder installing position is adjustable for 4steps of height. Install to favorite position.
 - ※ Make sure to match the left and right side holder position.
 - 5) Install screen to holder with attached welnut, screw, washer and rubber collar while adjusting left and right side balance.
 - 6) After adjusting balance of all bolts, final tighten each bolts.

ATTENTION!

- If there is a hard degradation like a blem, fatigue and wear etc on the reuse parts, please change to new ones.
- Before installation, make sure to match the hole position of front cowl not to break it.

